

DIRECTIONS

1. Replace the original cloth filter bag with disposable **ezPOOLBag**.
2. Place the automatic pool cleaner in the pool and let it run until the bag is full. On average the **ezPOOLBag** can be used for up to 3 cleaning cycles depending on the debris in the pool.

Tip: When you notice that your robotic pool cleaner slows down and stops climbing the walls, it is time to replace the filter bag.

3. When full, remove the used **ezPOOLBag** and install a new one.

SUPPORTED MODELS

Aquabot/Aquaproducts (Aquajet, Aquamax, BearBot, Bravo, Junior, Jetmax, Pool Butler, Pool Rovers, Pool Demon, Robotech, Storm, Supreme, Tempo, Thunder, Turbo, Viva, Xtreme, XL, Ultramax)

Dirt Devil (Avenger, Catalyst, Rampage)

Hayward/AquaVac (Tigershark)

iRobot (Verro 100, Verro 300, Verro 500)

Water Tech (Aquaclean, Aquamax, Blue Pearl, Blue Diamond, Blue Sapphire, Fury, Kleen-A-Tron)

Maytronics/Dolphin (Advantage, Diagnostic, Pro Diagnostic, Diagnostic Commander, Dynamic, Dynamic Plus, HD, Luminous, ProKleen, Supreme M4, Supreme M5, Magic, Wave, 2x2)

Pentair (Kreepy Krauly Prowler 710, Kreepy Krauly Prowler 720, Kreepy Krauly Prowler 730)

*If you do not see your pool robot in the list, please contact **info@ezpoolbag.com** and we will let you know if **ezPOOLBag** fits your model.*